

It is a print method from Web

PRINT

Webからの印刷方法

Login URL : I launch [login URL of Univ. of Tsukuba] and I input user ID and a password and log in.

© 2022 KYOCERA Document Solutions Japan Inc.


It is a print method from Web

PRINT


It is a print method from Web

If, after the login, change to a user home screen, of the lower screen please click "print with a file".


© 2022 KYOCERA Document Solutions Japan Inc.



It is a print method from Web



PRINT

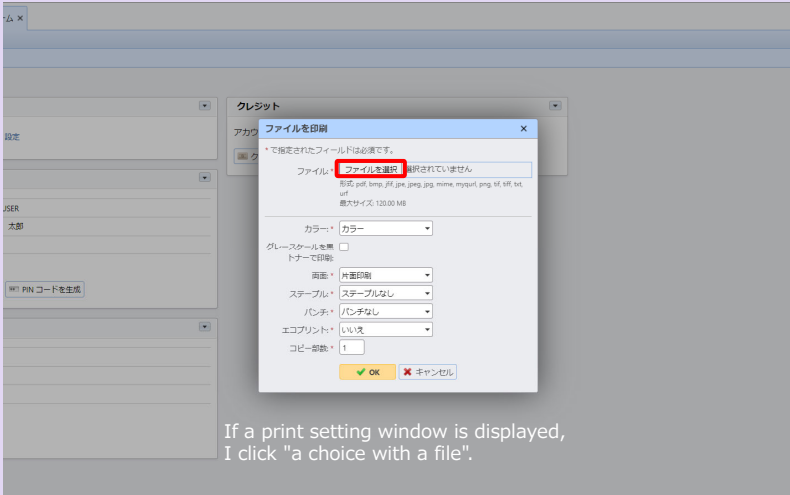It is a print method from Web




If a print setting window is displayed,
I click "a choice with a file".


© 2022 KYOCERA Document Solutions Japan Inc.



It is a print method from Web


PRINT

It is a print method from Web

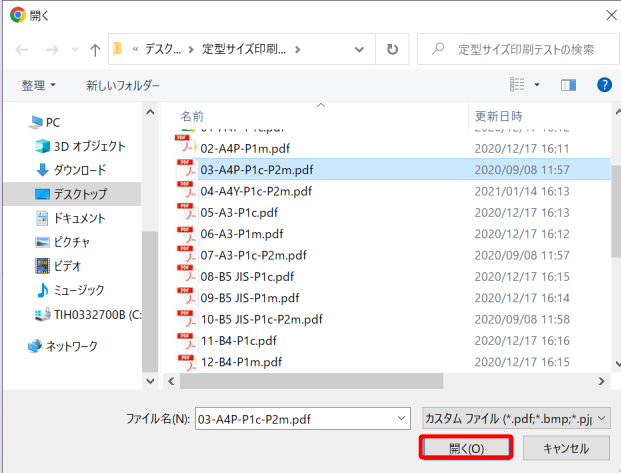


You choose the file
which you want to
print, and please click
"open".

© 2022 KYOCERA Document Solutions Japan Inc.

It is a print method from Web

PRINT

It is a print method from Web

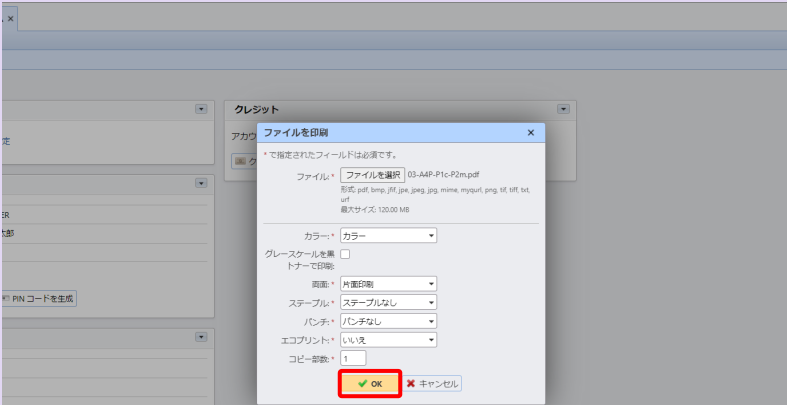


A job is transmitted to a server by clicking an "OK" button if I return to a screen of the print setting. Black and white, simple print setting such as both sides, the number of copies is possible before job transmission.

© 2022 KYOCERA Document Solutions Japan Inc.

It is a print method from Web

PRINT

It is a print method from Web

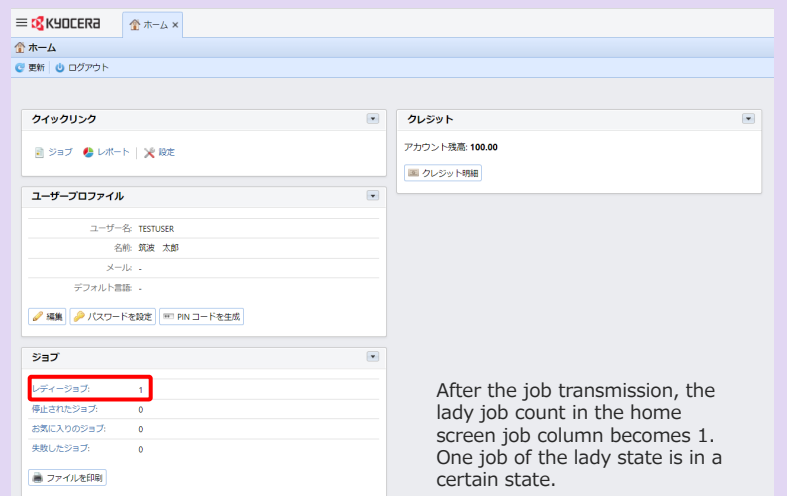

After the job transmission, the lady job count in the home screen job column becomes 1. One job of the lady state is in a certain state.

© 2022 KYOCERA Document Solutions Japan Inc.

KYOCERA

It is a print method from Web

PRINT

It is a print method from Web

A job screen from the quick link "job" of the home screen can change.
 The parameter of a history, the status of the job and the transmitted job can be confirmed by this screen.
 I can perform the deletion of the job, too.

© 2022 KYOCERA Document Solutions Japan Inc.

KYOCERA

About login①

全般

Login method to a compound plane

IC card login

I touch a card reader with an IC card and log in.
 ※The position of the card reader varies according to models slightly, but becomes the operation panel upper part like the chart below.

© 2022 KYOCERA Document Solutions Japan Inc.

About login②


全般

Login method to a compound plane

ID/password login


I input user ID/password with a login screen.

Login screen

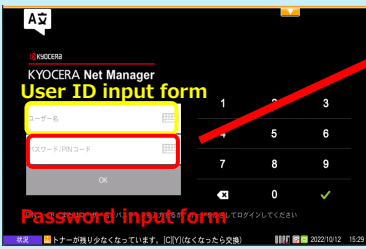


Password input form

I am replaced by a keyboard screen when I tap input foam.



Please input a user name, a password into each form.




I tap a [OK] button and log in.

© 2022 KYOCERA Document Solutions Japan Inc.

About login②


全般


Method to change the language indication of the login screen

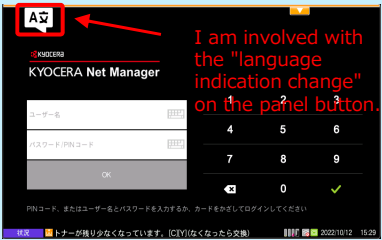

I am involved with the "language indication change" on the panel button.

As it changes, I touch a list of indication languages screen by the language that I want to change.

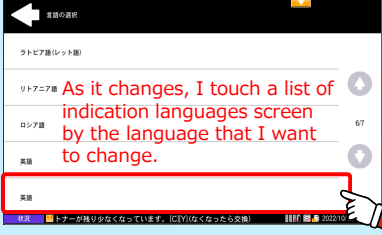

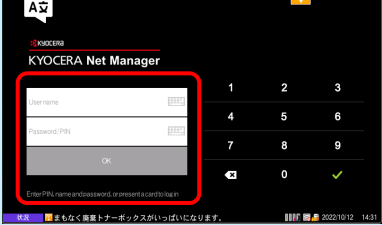

The indication language of the login screen confirms that you are changed, and please log in.

© 2022 KYOCERA Document Solutions Japan Inc.


KYOCERA

About login③

0

全般

Method to change the language indication of the login screen



login URL : I launch login URL "of" Univ. of Tsukuba and I input user ID and a password and log in.

© 2022 KYOCERA Document Solutions Japan Inc.


KYOCERA

About login③

0

全般

Method to change the language indication of the login screen

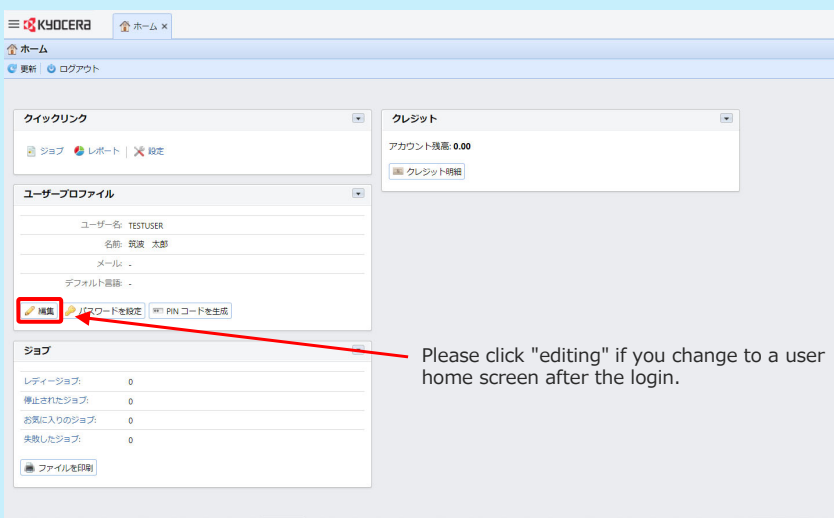

Please click "editing" if you change to a user home screen after the login.


© 2022 KYOCERA Document Solutions Japan Inc.

KYOCERA

About login③

全般

Method to change the language indication of the login screen



ユーザープロフィールの設定

*で指定されたフィールドは必須です。

ユーザー 筑波 太郎 のユーザープロフィールの詳細を設定中

ユーザー名: TESTUSER

名前: 筑波 太郎


メール:

デフォルト言語: English (United States)

代理ユーザー:

保存 キャンセル

If the setting window of the user profile is displayed, I choose the language that I want to change among pull-down of "default language" and push "preservation" button.



ユーザープロフィール

ユーザー名: TESTUSER

名前: 筑波 太郎

メール:

デフォルト言語: English (United States)

編集 パスワードを設定 Wi-Fi PIN コードを生成

After the preservation, it is operation completion if changed to the language that "default language" of the user profile chose.


© 2022 KYOCERA Document Solutions Japan Inc.

KYOCERA

About login③

全般

Method to change the language indication of the login screen

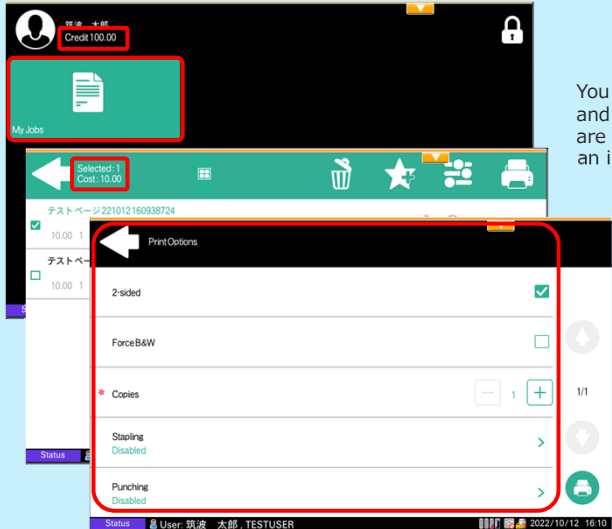

クレジット 100.00

My Jobs

Selected 1 Cost: 10.00

Print Options

2-sided

Force B&W

* Copies 1

Stapling Disabled

Punching Disabled

Status User: 筑波 太郎, TESTUSER 2022/10/12 16:10

You log in from a printer panel, and please confirm whether you are changed to the language that an indication language chose.


© 2022 KYOCERA Document Solutions Japan Inc.

About login④

0

全般

Method to change the language indication of the login screen

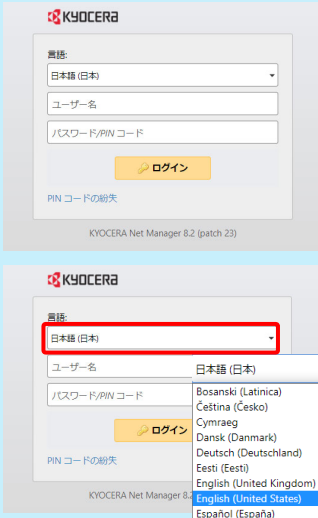

If the setting window of the user profile is displayed, I choose the language that I want to change among pull-down of "default language" and push "preservation" button.

I input user ID, a password and log in if I confirm that a language was replaced.


© 2022 KYOCERA Document Solutions Japan Inc.

About login④

0

全般

Method to change the language indication of the login screen

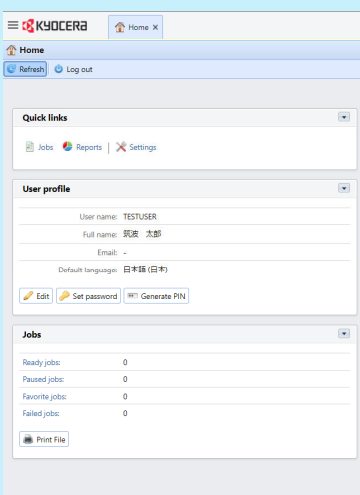

After the login, please confirm that a user screen is displayed by the language that I chose.

© 2022 KYOCERA Document Solutions Japan Inc.

About logout

0

全般

ログアウト方法

Please do not be separated from an apparatus for securing of **security** until printing is over.

In addition, I push "**logout**" button by all means and, after the use, log out.



ECOSYS P8060dn/
ECOSYS P4060dn panel

© 2022 KYOCERA Document Solutions Japan Inc.


Explanation of the home screen

0

全般

ホーム画面について

After the login, "my job" button is displayed on an operation panel.

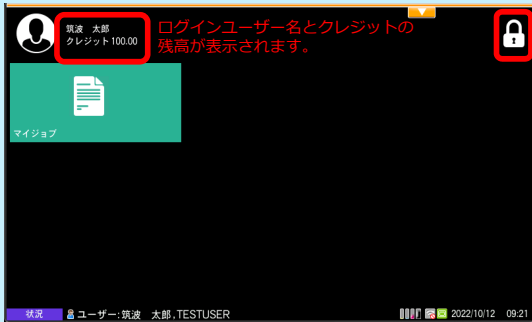

(logout) button

※About a function choice button


My job	I list it on a panel and display own print job.
--------	---

© 2022 KYOCERA Document Solutions Japan Inc.


KYOCERA The output of print data, deletion method PRINTER

Print of the printer

 I touch it with "My job" button with a home screen.



You choose the job that you want to print among a list of jobs screen, and please push "print" button of the top right corner.

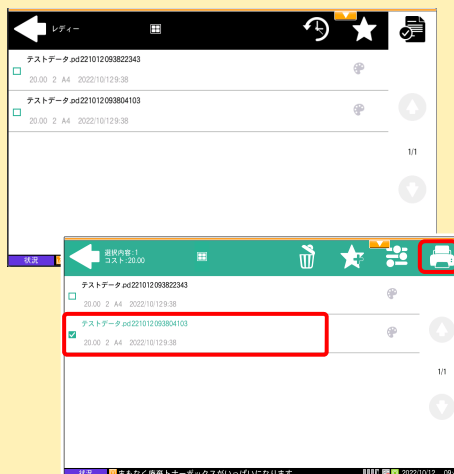


© 2022 KYOCERA Document Solutions Japan Inc.

KYOCERA The output of print data, deletion method PRINTER


Setting change of the print job

I choose it and am involved in "⚙" with one print job.

※I cannot change it at the time of the plural choices

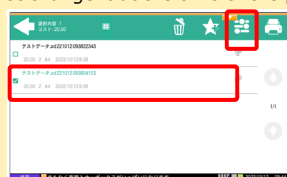


In the case of one side/both sides, the copy number of copies, color printing, I can change the setting to the black and white. Please push "print" button of the lower right after the change.

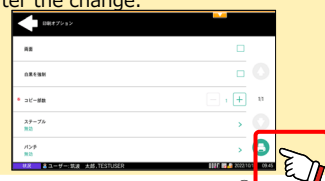

I delete the print job


I choose the job that I want to delete and am involved with "trash box" icon.

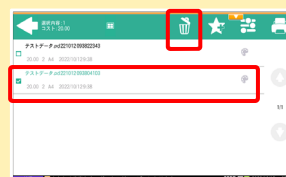


As a confirmation message of the deletion is displayed, please touch it with "yes" button.




© 2022 KYOCERA Document Solutions Japan Inc.


KYOCERA The output of print data, deletion method



PRINTER

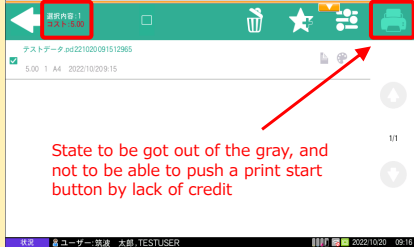Print of the printer- In the case of lack of credit



State to be got out of the gray, and not to be able to push a print start button by lack of credit

When there is fewer it than the number of the necessary points of the job that a possession point number wants to print, I cannot print it. (At the time of reference image 1 point possession)



State to be got out of the gray, and not to be able to push a print start button by lack of credit

In addition, it is got out of the gray, and, in the case of 0 points, "my job" button is displayed with "lacking in credit " a possession point.

© 2022 KYOCERA Document Solutions Japan Inc.